

2003 Honda CRV Stereo Wiring Information

Radio Constant 12V+ Wire: White/Red (BAT)

Radio Switched Ignition 12V+ Wire: Yellow/Red or Yellow/Green (ACC)

Radio Ground Wire: Black

Radio Illumination Dimmer Wire: Red/Black

Left Front Speaker Wire (+): Green/Black

Left Front Speaker Wire (-): Light Green

Right Front Speaker Wire (+): Green/Yellow

Right Front Speaker Wire (-): Gray/Red

Left Rear Speaker Wire (+): Blue/White

Left Rear Speaker Wire (-): Blue/Black

Right Rear Speaker Wire (+): Pink

Right Rear Speaker Wire (-): Blue/Yellow

The following information is currently not available:

Radio Antenna Trigger Wire

Radio Amplifier Turn On Wire


Front Speaker Size

Rear Speaker Size



ACC (red), supplies **+12V** power to car audio and other accessories, only when the car's ignition is switched on.

Constant (yellow), also called BAT or Battery, provides permanent **+12V** power from battery. This allows the radio to retain settings (for example stored radio stations) when the ignition is switched off.

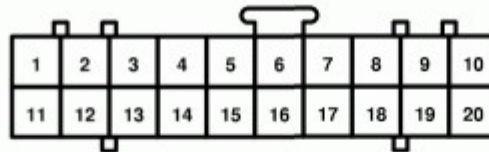

Factory:

– On dashboard wire harness (left branch)

except 2-door V6 M/T:

- | | |
|--|---|
| 1 YEL/GRN (Antenna input) | 11 LX V6, EX, EX-L: BRN
(Radio remote switch output) |
| 2 YEL/RED
(Fuse 32 – Under-dash) | 12 EX-L: Navigation: BLU/RED
(Navigation system) |
| 3 LX V6, EX, EX-L: GRN/RED
(Radio remote switch output) | 13 EX-L: Navigation: WHT
(Navigation system) |
| 4 LX V6, EX, EX-L: RED/BLU
(Security input) | 14 — |
| 5 PNK (RR (+)) | 15 BLU/YEL (RR (-)) |
| 6 BLU/WHT (LR (+)) | 16 BLU/BLK (LR (-)) |
| 7 GRN/YEL (RF (+)) | 17 GRY (RF (-)) |
| 8 GRN/BLK (LF (+)) | 18 LT GRN (LF (-)) |
| 9 RED/BLK (Dim control +) | 19 RED (Dim control -) |
| 10 WHT/GRN
(Fuse 5 – Under-dash) | 20 BLK (G504) |

2-door V6 M/T:

- | | |
|---|--|
| 1 YEL/GRN (Antenna input) | 11 BRN
(Radio remote switch output) |
| 2 YEL/RED
(Fuse 32 – Under-dash) | 12 EX-L: Navigation: BLU/RED
(Navigation) |
| 3 GRN/RED
(Radio remote switch output) | 13 EX-L: Navigation: WHT
(Navigation) |
| 4 RED/BLU (Security input) | 14 — |
| 5 LT GRN (RR (+)) | 15 PUR (RR (-)) |
| 6 BLU (LR (+)) | 16 PNK (LR (-)) |
| 7 GRN/YEL (RF (+)) | 17 GRY (RF (-)) |
| 8 GRN/BLK (LF (+)) | 18 LT GRN (LF (-)) |
| 9 RED/BLK (Dim control +) | 19 RED (Dim control -) |
| 10 WHT/GRN
(Fuse 5 – Under-dash) | 20 BLK (G504) |

Honda Accessory:

– On telephone ECU harness

- | | |
|---|---|
| 1 YEL/GRN (Antenna input) | 11 BRN
(Radio remote switch output) |
| 2 YEL/RED
(Fuse 32 – Under-dash) | 12 EX-L: Navigation: GRN
(Navigation system) |
| 3 GRN/RED
(Radio remote switch output) | 13 EX-L: Navigation: WHT/GRN
(Navigation system) |
| 4 RED/BLU (Security input) | 14 YEL/GRN
(Cellular phone system) |
| 5 PNK (RR (+)) | 15 BLU/YEL (RR (-)) |
| 6 BLU/WHT (LR (+)) | 16 BLU/BLK (LR (-)) |
| 7 GRN/YEL (FPD (+)) | 17 GRY (FPD (-)) |
| 8 GRN/BLK (LF (+)) | 18 LT GRN (LF (-)) |
| 9 RED/BLK (Dim control +) | 19 RED (Dim control -) |
| 10 WHT/GRN
(Fuse 5 – Under-dash) | 20 BLK (G504) |